

500 MILE FREE SERVICE

All items marked (●) are carried out during the 500 mile free service plus the additional three items:

- Retorque the cylinder head nuts B14
- Check the cylinder barrel nuts B19
- Check the wheel spoke tension F20

DAILY

- Check the oil reservoir level and return oil flow A3
- Check the tyre pressures "General Data", F25
- Check the operation of the tachometer/speedometer/horn and lights H9, H14 & H15
- Check the operation of the front and rear brakes F28

EVERY 1500 MILES (2400kms)

- Change the engine oil and clean the filters A3
- Grease the rear swinging fork pivots A16
- Check the tyre pressures "General Data", F25
- Adjust/check/lubricate the rear chain A12, F24
- Check the front and rear brake reservoir levels F2
- Check and adjust the primary chain C2
- Adjust and lubricate all control cables A17, A18
- Check the battery electrolyte level H1
- Check all accessible nuts and bolts F1
- Check rear brake pedal clearance F1

EVERY 300 MILES (480kms)

- Check the contact breaker gap and lubricate A9
- Adjust the tappets B5
- Check the ignition timing B28 & B29
- Check and adjust the spark plugs H3
- Change the oil in the primary chaincase A11
- Check the wheel bearings for play F3
- Check the tyres for wear F3
- Check the brake disc pads for wear F3
- Check the rear brake shoes for wear (prior to frame no. HN62501) F15
- Grease the rear brake pedal spindle A19
- Clean the air filter element(s) B6
- Clean the fuel filters E1
- Check the clutch push rod adjustment C1
- Check the gearbox oil level A10
- Grease the rear brake cam spindle (prior to frame no. HN62501) A16

EVERY 6000 MILES (9600kms)

- Change the gearbox oil A10
- Check and adjust the steering head races G1
- Change the oil in the front fork legs A15

EVERY 10000 MILES (16000kms)

- Check the metal brake pipes and rubber hoses for signs of deterioration or corrosion F6

EVERY 15000 MILES (24000kms)

- Grease the steering head bearings G2
- Grease the wheel bearings F12, F14, F17

EVERY 24000 MILES (38400kms)

- Drain and refill the front and rear hydraulic systems F5

EVERY 40000 MILES (64000kms)

- Service or replace the FRONT brake master cylinder and front/rear brake calipers F9, F8
- Replace the REAR brake motor cylinder and front and rear metal pipes and brake hoses F7, F6